
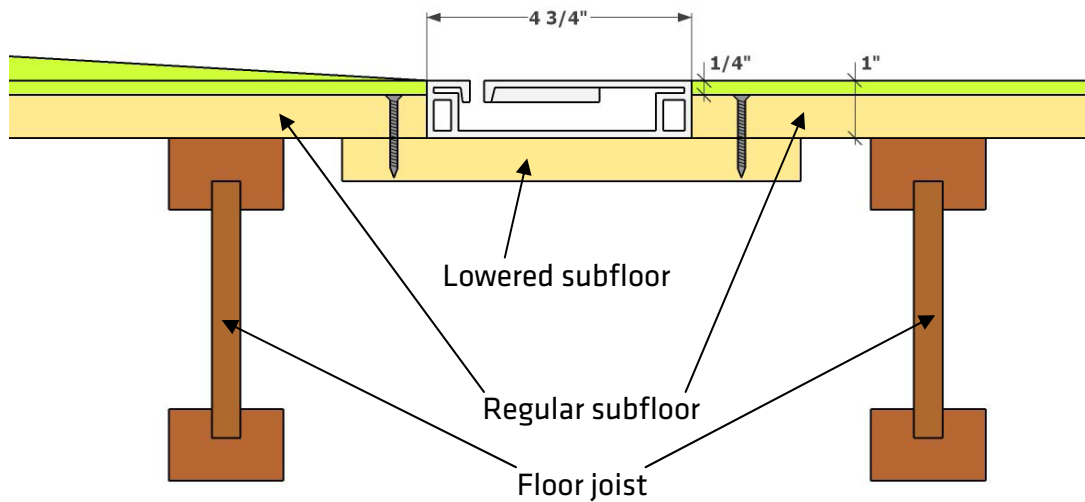


BARRIER-FREE SHOWER USING THIN PROFILE SINGLE SLOPE SHOWER PANS

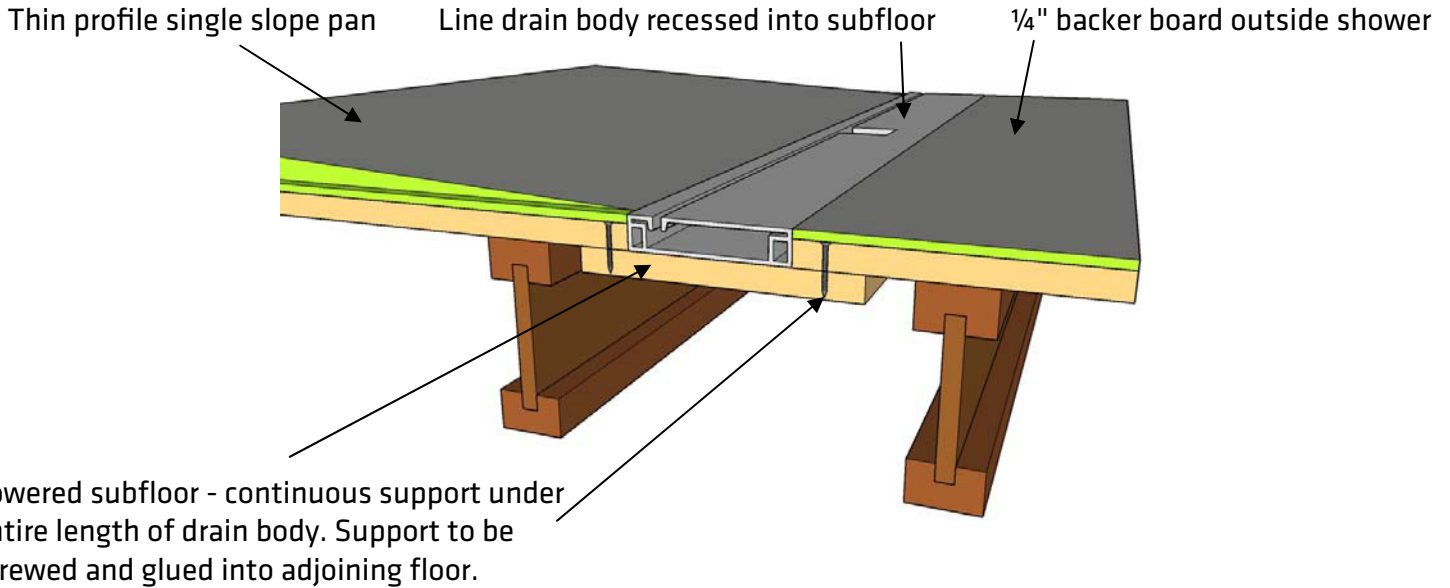

Notes:

1. Installation to be completed in accordance with all manufacturer specifications.
2. Drawings not to scale.
3. Sloped at 1/4" per foot to the drain.
4. Line drain will attach to shower pan on the thin edge.

HYDROBLOK GRAND INTERNATIONAL LTD.

www.hydroblok.com

info@hydroblok.com

Toll Free: 1 844 588 9559